



# LASER COMPETITION 2

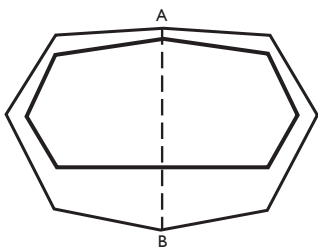

1. Unpack tent and lay out flysheet and inner.  
(Note: The inner tent is already attached to the inside of the flysheet)
2. Carefully assemble the alloy pole.  
Ensure all the joints are fully connected.
3. Slide pole through flysheet pole sleeve, shown as the dotted line on the diagram above. (Note: this is located under the black pole sleeve cover)
4. Insert each pole-end into the corresponding eyelet tab on the hem of the flysheet, tabs are located at points A and B on diagram above.
5. Peg out: in the following order:
  - i) tape attached to each end of the inner
  - ii) guy rope at each end of the flysheet (note: the carbon fibre poles should slope out slightly at the top)
  - iii) remaining inner and flysheet tapes and elastics

## Flysheet ventilation system

To operate: Pull on white reflective cord to open. Pull on black cord to close. (Note: Do not peg out the end points of the flysheet as this will prevent the ventilation system from working.)

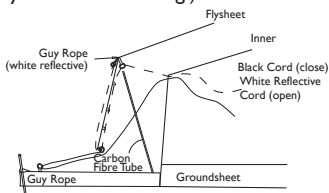

The Laser Competition 2 is supplied with:

1 alloy pole, 2 black carbon fibre poles

12 titanium 2g pegs

**To validate your warranty register online at [www.terra-nova.co.uk](http://www.terra-nova.co.uk)**

Pour valider votre garantie, enregistrez-vous en ligne sur [www.terra-nova.co.uk](http://www.terra-nova.co.uk)

Zur Bestätigung Ihrer Garantie registrieren Sie sie bitte online unter [www.terra-nova.co.uk](http://www.terra-nova.co.uk)

**For tent pitching and care instructions visit [www.terra-nova.co.uk](http://www.terra-nova.co.uk)**

Pour consulter les instructions de montage et d'entretien des tentes, visitez [www.terra-nova.co.uk](http://www.terra-nova.co.uk)

Anweisungen zur Zeltaufstellung und Pflege finden Sie unter [www.terra-nova.co.uk](http://www.terra-nova.co.uk)