


SUPER QUASAR

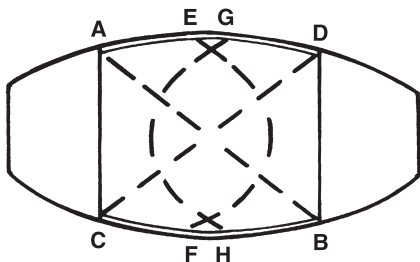

1. Lay out the inner tent.
2. Connect the pole sections together taking care that all the joints are fully inserted (otherwise the poles can be damaged when you tension the tent).
3. Push the two red poles through the sleeves in the lines A-B and C-D, see diagram above, making sure that at least 60cm of pole sticks out at points B and D.
4. Push the two blue pre-curved poles through the sleeves in the lines E-F, and G-H, making sure that at least 60cm of pole sticks out at points F and G.
5. Insert the pole-ends into the outer most eyelets at B and D. Walk round the tent and push the poles at A and C upwards, until it is possible to insert the pole-ends into the outer most eyelets. Next, insert the pole-ends into the eyelets at points E and G. Then go round to the other side and insert the pole-ends at points F and H.
6. Pull the flysheet over the tent and locate the eyelets under the pole-ends.
7. Peg out the four corners of the inner tent **ONLY**.
8. Finally, peg out all the elastics and guylines.

The Super Quasar is supplied with:

4 alloy poles

18 alloy pegs

To validate your warranty register online at www.terra-nova.co.uk

Pour valider votre garantie, enregistrez-vous en ligne sur www.terra-nova.co.uk

Zur Bestätigung Ihrer Garantie registrieren Sie sie bitte online unter www.terra-nova.co.uk

For tent pitching and care instructions visit www.terra-nova.co.uk

Pour consulter les instructions de montage et d'entretien des tentes, visitez www.terra-nova.co.uk

Anweisungen zur Zeltaufstellung und Pflege finden Sie unter www.terra-nova.co.uk