


SUPERLITE VOYAGER

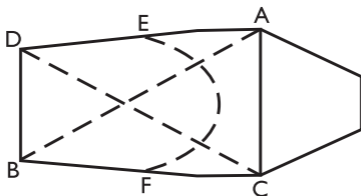

1. Lay out the inner tent.
2. Carefully assemble each of the 3 poles.
Ensure all the joints are fully inserted.
3. Using the diagram above lay the poles over the inner tent as follows.
Pole 1 (blue) diagonally between A and B, making sure the pre-curved section is at the back of the tent.
Pole 2 (blue) diagonally between C and D, making sure the pre-curved section is at the back of the tent.
Pole 3 (red) between E and F.
4. Insert a pole-end into the outer most eyelet of each inner tent eyelet tape. The tapes are colour coded to match the relevant pole.
5. Clip the inner tent to the poles.
6. Throw the flysheet over the inner tent.
Hook flysheet eyelet tabs to pole end-tips.
7. Insert each pole-end into the corresponding eyelet tape on the hem of the flysheet. Note the eyelet tapes are colour coded to match the relevant pole.
8. Peg out the tent.
9. Remember to adjust the flysheet tension as conditions alter. (The flysheet will tighten in strong sunlight and slacken if it gets wet).

Superlite Voyager is supplied with:

3 alloy poles (1 x red, 2 x blue)

12 x 2g pegs

To validate your warranty register online at www.terra-nova.co.uk

Pour valider votre garantie, enregistrez-vous en ligne sur www.terra-nova.co.uk

Zur Bestätigung Ihrer Garantie registrieren Sie sie bitte online unter www.terra-nova.co.uk

For tent pitching and care instructions visit www.terra-nova.co.uk

Pour consulter les instructions de montage et d'entretien des tentes, visitez www.terra-nova.co.uk

Anweisungen zur Zeltaufstellung und Pflege finden Sie unter www.terra-nova.co.uk